

PEUGEOT SERVICING

TYPES OF SERVICE

Each vehicle has its own servicing cycle, based upon the engine type.

This cycle consists of alternating two types of service, A and C, intermediate visits and a few additional operations depending on your vehicle; these correspond to key stages in the life of your vehicle.

When the first service is carried out and at each subsequent service, your dealer will advise you of the type and content of the next service due.

THE MAINTENANCE CYCLE FOR YOUR 206 CC

Service every 20,000 miles (30,000 km) or 2 years

MILES (KM)		20,000 (30,000)		40,000 (60,000)		60,000 (90,000)	
1st service at 6,000 miles (10,000 km) or 6 months*. This is necessary in order to benefit from the warranty							
							
80,000 (120,000)	100,000 (150,000)	120,000 (180, 000)		140,000 (210,000)		160,000 (240,000)	
							
							

These services are to be carried out with **10W40 synthetically based oil** minimum.

They can also be carried out with **5W30 Fuel Economy oil** or with **5W40 synthetic oil**.

Arduous conditions of use (see corresponding section).

* Whichever comes first.



Intermediate top-up visit incorporated in the Servicing Schedule.