

Warning lamps

When the engine is running or the vehicle is being driven, the switching on of one of the following warning lamps indicates a fault which requires action on the part of the driver.



Any fault resulting in the switching on of a warning lamp must be investigated further by reading the associated message on the multifunction screen.

If you encounter any problems, do not hesitate to contact a PEUGEOT dealer.

Warning lamp		is on	Cause	Action/Observations
	STOP	fixed, associated with another warning lamp and accompanied by an audible signal.	It is associated with the braking system or the engine coolant temperature.	Stop as soon as it is safe to do so. Park, switch off the ignition and call a PEUGEOT dealer.
	Service	temporarily.	A minor fault has occurred for which there is no specific warning lamp.	Identify the fault by reading the message shown on the screen, such as, for example: - the engine oil level, - the screenwash level, - the remote control battery, - saturation of the particle emission filter (Diesel). For any other faults, contact a PEUGEOT dealer.
		fixed.	A major fault has occurred for which there is no specific warning lamp.	Identify the fault by reading the message shown on the screen and contact a PEUGEOT dealer.
		fixed.	The braking system fluid level has dropped significantly.	Top up with brake fluid recommended by PEUGEOT. If the problem persists, have the system checked by a PEUGEOT dealer.
			fixed, associated with the ABS warning lamp.	The electronic brake force distribution (EBFD) system has a fault.

Warning lamp		is on	Cause	Action/Observations
	Anti-lock Braking System (ABS)	fixed.	The anti-lock braking system has a fault.	The vehicle retains conventional braking without servo assistance. Drive carefully at reduced speed and contact a PEUGEOT dealer without delay.
	Dynamic stability control (ESP/ASR)	flashing.	The ESP/ASR regulation is active.	The system optimises traction and improves the directional stability of the vehicle.
		fixed.	Unless it has been deactivated with the indicator lamp on the button on, the ESP/ASR system is faulty.	Have it checked by a PEUGEOT dealer.
	Engine autodiagnosis system	fixed.	The emission control system has a fault.	This lamp should switch off when the engine is started. If it does not switch off, contact a PEUGEOT dealer urgently.
		flashing.	The engine management system has a fault.	Risk of destruction of the catalytic converter. Have it checked by a PEUGEOT dealer.
	Low fuel level	fixed with the last two segments flashing.	When it first comes on there remains approximately 5 litres of fuel in the tank.	Refuel as soon as possible to avoid running out of fuel. This warning lamp will come on every time the ignition is switched on, until a sufficient addition of fuel is made. Fuel tank capacity: approximately 50 litres (petrol) or 45 litres (Diesel). Never continue to drive until you run out of fuel, this could damage the emission control and injection systems.

Warning lamp		is on	Cause	Action/Observations
	Maximum coolant temperature	fixed red.	The temperature of the cooling system is too high.	Stop as soon as it is safe to do so. Wait until the engine has cooled down before topping up the level, if necessary. If the problem persists, contact a PEUGEOT dealer.
	Engine oil pressure	fixed.	There is a fault with the engine lubrication system.	Stop as soon as it is safe to do so. Park, switch off the ignition and contact a PEUGEOT dealer.
	Battery charge	fixed.	The battery charging circuit has a fault (dirty or loose terminals, slack or cut alternator belt, ...).	This lamp should switch off when the engine is started. If it does not switch off, contact a PEUGEOT dealer.
	Door(s) open	fixed if the speed is below 6 mph (10 km/h).	A door, the boot, the rear screen or the bonnet is still open.	Close the door or boot.
		fixed and accompanied by an audible signal if the speed is above 6 mph (10 km/h).		
	Directional headlamps	flashing.	The directional headlamps system is faulty.	Have it checked by a PEUGEOT dealer.

Warning lamp		is on	Cause	Action/Observations
	Airbags	temporarily.	This lamp comes on for a few seconds when you turn on the ignition, then switches off.	This lamp should switch off when the engine is started. If it does not switch off, contact a PEUGEOT dealer.
		fixed.	One of the airbag or seat belt pretensioner systems has a fault.	Have it checked by a PEUGEOT dealer.
	Front seat belt not fastened/unfastened	fixed then flashing accompanied by an increasing audible signal.	The driver and/or the front passenger has not fastened or has unfastened their seat belt.	Pull the strap then insert the tongue in the buckle.
	Rear seat belt not fastened/unfastened	fixed then flashing accompanied by an audible signal.	One or more rear passengers have unfastened their seat belt.	
	Power steering	fixed.	The power steering has a fault.	Drive carefully at reduced speed. Have it checked by a PEUGEOT dealer.
	Water in Diesel	fixed.	The diesel filter contains water.	Risk of damage to the injection system on Diesel engines. Contact a PEUGEOT dealer without delay.
	Punctured wheel	fixed.	One or more wheels are punctured or seriously deflated.	Stop immediately avoiding any sharp action on the steering wheel or the brakes. Repair or change the damaged wheel and have the pressure of the tyres checked as soon as possible.