


Fascia fuses

The fuse box is placed in the lower section of the fascia (left-hand side).



Access to the fuses


☞ refer to the paragraph "Access to the tools".

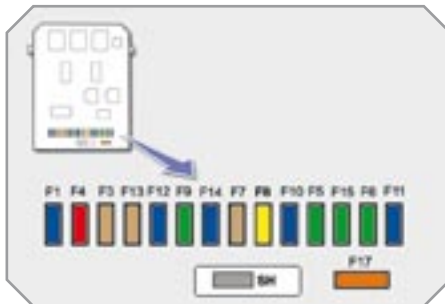

Fuse tables

Fuse N°	Rating	Functions
G36	30 A	Driver and passenger heated seats.
G37	5 A	Driving position memory unit, lighting rheostat.
G38	30 A	Driver's seat memory unit.
G39	30 A	Trailer fuse box supply.
G40	-	Not used.

Fuse N°	Rating	Functions
F1	15 A	Rear wiper.
F2	-	Not used.
F3	5 A	Air bags and pretensioners control unit.
F4	10 A	Clutch pedal and dual-function brake switches, electrochromatic interior mirror, air conditioning, steering wheel angle sensor, automatic gearbox, switching and protection unit.
F5	30 A	Front one-touch electric windows, folding mirrors supply, glass panoramic roof shutter.
F6	30 A	Rear one-touch electric windows, trailer fuse box.
F7	5 A	Front and rear courtesy lights, map reading lights, rear reading lights, sun visor lighting, glove box lighting, portable lamp.

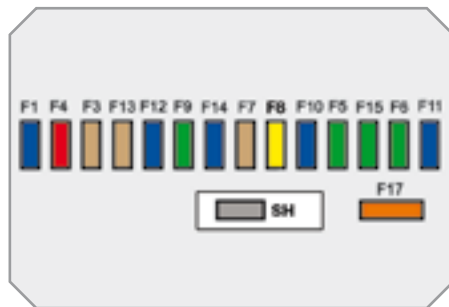

Fuse N°	Rating	Functions
F8	20 A	Audio equipment, audio/telephone, CD changer, multifunction display, tyre under-inflation detection.
F9	30 A	Front 12 V socket.
F10	15 A	Steering wheel controls, alarm siren, alarm control unit.
F11	15 A	Low current ignition switch.
F12	15 A	Instrument panel, seat belt and passenger's front air bag warning lights display, air conditioning, driver's seat memory unit, 2nd row rear seat switches, driving school module.
F13	5 A	Engine fuse box, air bags, piloted manual gearbox gear lever, trailer fuse box.
F14	15 A	Multifunction display, amplifier, hands-free kit, rain/brightness sensor, parking assistance control unit.
F15	30 A	Locking and deadlocking.
F17	40 A	Rear screen and exterior mirrors de-icing.
SH	-	PARC shunt.