


Engine compartment fuses

The fuse box is placed in the engine compartment near the battery (left-hand side).




Access to the fuses

- ☞ Unclip the cover.
- ☞ Change the fuse (see corresponding paragraph).
- ☞ When you have finished, close the cover carefully to guarantee the sealing of the fuse box.

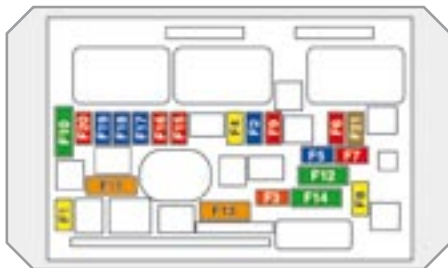

Fuse table

Fuse N°	Rating	Functions
F1	20 A	Engine control unit supply, injection pump and EGR solenoid valves (2 l HDI 16V), injectors (2 l HDI 16V).
F2	15 A	Horn.
F3	10 A	Front/rear wash-wipe.
F4	20 A	Headlamp wash.
F5	15 A	Purge canister, turbine discharge and Turbo pressure regulation solenoid valves (1.6 l THP 16V), oil vapour heater (1.6 l THP 16V), diesel heater (1.6 l HDI 16V).
F6	10 A	Vehicle speed sensor, ABS/ESP control unit.
F7	10 A	Power steering control unit, automatic gearbox, engine coolant level detector.
F8	25 A	Starter control.
F9	10 A	Diagnostic socket, directional headlamps, air flow sensor (Diesel), particle emission filter pump (Diesel).
F10	30 A	Engine control unit actuators (petrol: ignition coils, solenoid valves, oxygen sensors, injectors, heaters, fuel pump, controlled thermostat) (Diesel: solenoid valves, heaters).
F11	40 A	Air conditioning blower.

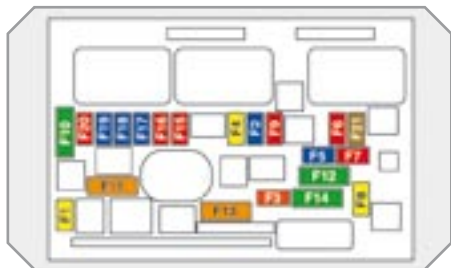

Fuse N°	Rating	Functions
F12	30 A	Windscreen wipers slow/fast speed.
F13	40 A	Built-in systems interface supply (ignition positive).
F14	30 A	Air pump.
F15	10 A	Right-hand main beam headlamp.
F16	10 A	Left-hand main beam headlamp.
F17	15 A	Left-hand dipped headlamp.
F18	15 A	Right-hand dipped headlamp.
F19	15 A	Oil vapour heater (1.4 l 16V and 1.6 l VTi 16V), purge canister solenoid valve (1.4 l 16V and 1.6 l VTi 16V), oxygen sensors (petrol), air cooling solenoid valves (Diesel).
F20	10 A	Controlled thermostat, variable timing solenoid valves, Turbo pressure regulation solenoid valve (Diesel), engine coolant level detector (Diesel).
F21	5 A	Fan assembly relay supply, Valvetronic relay control (1.4 l 16V and 1.6 l VTi 16V), Turbo cooling (1.6 l THP 16V), air flow sensor (1.6 l HDI 16V).



Table of mini and midi-fuses above the battery

Fuse N°	Rating	Functions
F1	15 A	Gearbox (piloted manual or automatic).
F2	15 A	Diagnostic socket, daytime lights.
F3	5 A	Dual-function brake switch.
F4	-	Not used.
F5*	80 A	Power steering electropump assembly.
F6*	70 A	Heating unit (Diesel).
F7*	100 A	Switching and protection unit.
F8	-	Not used.
F9*	30 A	Piloted manual gearbox electropump assembly.
F10*	30 A	Valvetronic electric motor (1.6 I THP 16V).

Table of maxi-fuses

Fuse N°	Rating	Functions
MF1*	50 A	Fan assembly.
MF2*	50 A	Passenger compartment fuse box.
MF3*	80 A	Built-in systems interface.
MF4*	-	Not used.
MF5*	50 A	ABS/ESP control unit.
MF6*	30 A	ABS/ESP control unit.
MF7*	80 A	Built-in systems interface.
MF8*	-	Not used.

* The maxi-fuses provide additional protection for the electrical systems. All work on the maxi-fuses must be carried out by a PEUGEOT dealer.