DISPLAY



Total/trip distance recorder

When the ignition is switched on, the distance recorder selected when the engine was switched off is displayed.

Press button **1** to alternate the distance display:

- total with **"ODO"** displayed,
- trip with **"TRIP"** displayed.



To reset the trip recorder to zero, when it is displayed, press and hold button **1**.

"2 Tronic" gearbox indicator





Lever in EASY mode (automatic mode)

"E" is displayed when this operating mode is selected.

It is switched off on switching to manual mode.



Lever in manual mode

"M" is displayed when this operating mode is selected.

It is switched off on switching to EASY mode.



"Neutral"



"Reverse"

Operating mode:



1st gear



2nd gear



3rd gear



4th gear




5th gear



"!" warning light

If this warning light comes on, with the engine running, this indicates a malfunction of the **"2 Tronic"** gearbox.

Contact a PEUGEOT dealer.

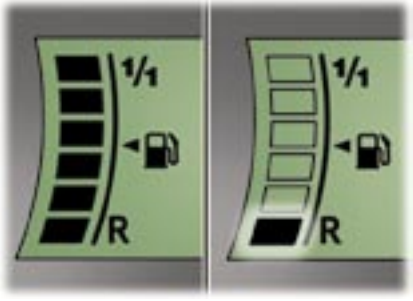

Fuel gauge

This indicates the quantity of fuel available:

- **1/1** and six blocks, the fuel tank is full.
- **R** and one block flashing, the fuel tank is on the reserve.

Low fuel level

When the minimum level in the fuel tank is reached, the last block flashes accompanied by an audible signal.

In certain driving conditions and depending on the engine, the distance which can be travelled with the fuel remaining may be less than 30 miles (50 km).

You have approximately 5 litres remaining.

When the frequency of the flashing increases, **you have approximately 3 litres remaining.**

At least 5 litres must be added after running out of fuel.

Running out of diesel fuel

After running out of fuel, you can travel a short distance after 10 pump repriming operations (see corresponding section).

After filling the fuel tank (minimum 5 litres), operate the repriming pump at least 10 times (see corresponding section).