ECONOMY MODE FUNCTION

After the engine has stopped, with the key in the accessories position, certain functions (windscreen wiper, courtesy lamps, audio equipment, dipped beam headlamps, etc.) can only be used for a maximum cumulative duration of approximately fifteen minutes, to prevent discharging of the battery.

Once the fifteen minutes are over, the message **"Economy mode active"** appears on the multifunction screen and the active functions are put on standby.

These functions will be reactivated automatically the next time the vehicle is used.

To resume the use of these functions immediately, start the engine and let it run for a few minutes.


The time available will then be double the time for which the engine is left running. However, this time will always be between five and fifteen minutes.

A flat battery will prevent the engine from starting.

TOWING THE VEHICLE

Procedure for having your vehicle towed.

Towing your vehicle

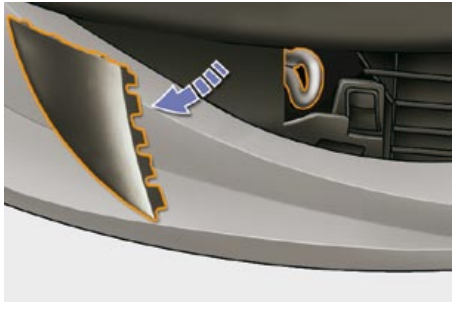

- On the front bumper, unclip the cover to gain access to the towing eye.
- Switch on the hazard warning lamps on the towed vehicle.
- Place the gear lever in neutral.

Failure to comply with this special requirement may result in damage to certain braking components and the absence of braking assistance the next time the engine is started.

Towing another vehicle

