
CHANGING A BULB

Procedure for replacing a faulty bulb with a new bulb without the use of tools.


Front lamps

Model with halogen lights

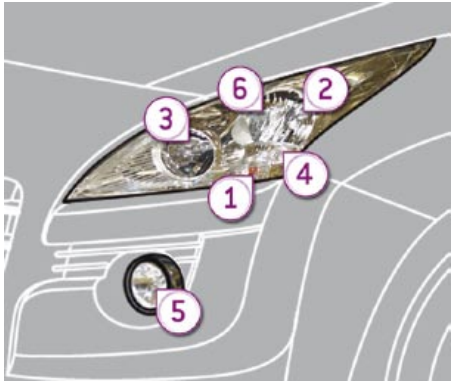

1. **Direction indicators (HP24-24 W).**
2. **Dipped headlamps (H7-55 W).**
3. **Main beam headlamps (H7-55 W).**
4. **Daytime lights (HP24-24 W).**
5. **Fog lamps (PS24-24 W).**
6. **Side lights (W 5-5 W).**

Model with xenon lights and directional headlamps

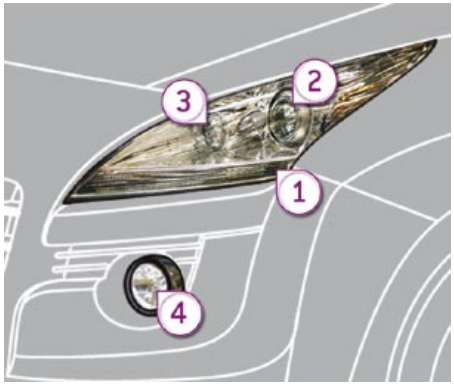

1. **Direction indicators (HP24-24 W).**
2. **Dipped/main beam headlamps (D1S-35 W).**
3. **Daytime/side lights (P21/5W).**
4. **Fog lamps (PS24-24 W).**

Risk of electrocution

Xenon bulbs (D1S-35 W) must be replaced by a PEUGEOT dealer.

In some climatic conditions (e.g. low temperature or humidity), the presence of misting on the internal surface of the glass of the headlamps and rear lamps is normal; it disappears after the lamps have been on for a few minutes.

The headlamps are fitted with polycarbonate glass with a protective coating:


- **do not clean them using a dry or abrasive cloth, nor with a detergent or solvent product,**
- use a sponge and soapy water,
- when using a high pressure washer on persistent marks, do not direct at the lamps or their outlines for too long, so as not to damage their coating and their seals.

- Do not touch the bulb directly with your fingers, use lint-free cloths.

Changing a halogen bulb should only be done after the headlamp has been switched off for a few minutes (risk of serious burns).


It is imperative to use only anti-ultraviolet (UV) type bulbs in order not to damage the headlamp.

Changing direction indicator bulbs

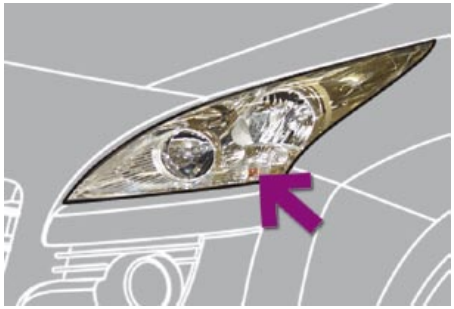

Consult a PEUGEOT dealer.


Changing dipped headlamp bulbs

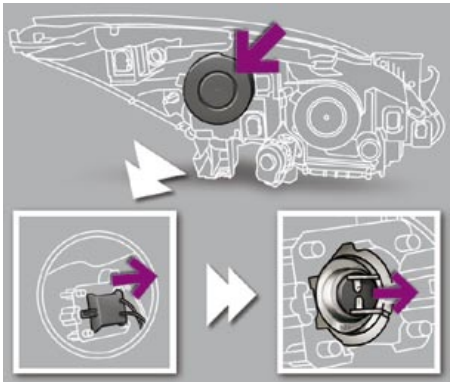

- Remove the protective plastic cover by pulling on the tab.
- Disconnect the bulb connector.
- Extract the bulb by pulling and change it.

To refit, carry out these operations in reverse order.

Changing main beam headlamp and side light bulbs

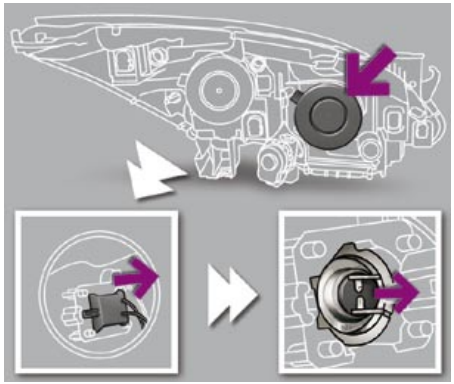

- Remove the protective plastic cover by pulling on the tab.
- Disconnect the bulb connector.
- Remove the bulb by pulling and change it.

To refit, carry out these operations in reverse order.

Changing dipped headlamp and main beam headlamp bulbs (xenon model)

Consult a PEUGEOT dealer.

Changing side light bulbs (xenon model)


- Remove the protective plastic cover by pulling on the tab.
- Disconnect the bulb connector.
- Remove the bulb by pulling and change it.

To refit, carry out these operations in reverse order.

Changing daytime light bulbs

Consult a PEUGEOT dealer.

Changing integrated direction indicator side repeaters

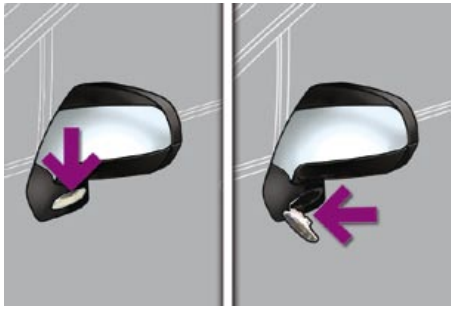


- Insert a screwdriver towards the centre of the repeater between the repeater and the base of the mirror.
- Tilt the screwdriver to extract the repeater and remove it.
- Disconnect the repeater connector.

To refit, carry out these operations in reverse order.

Contact a PEUGEOT dealer to obtain replacement repeaters.

You can also contact a PEUGEOT dealer to have these bulbs changed.

Changing foglamp bulbs

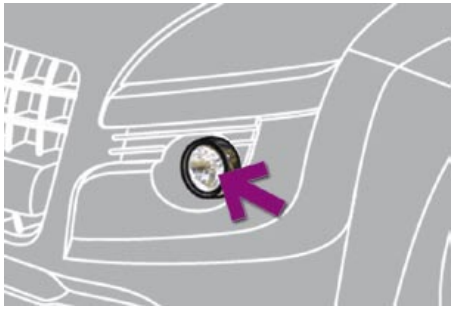

Consult a PEUGEOT dealer.