
TOWING YOUR VEHICLE

Without lifting (4 wheels on the ground)

You must always use a towbar.

The removable towing eye is inside the spare wheel.



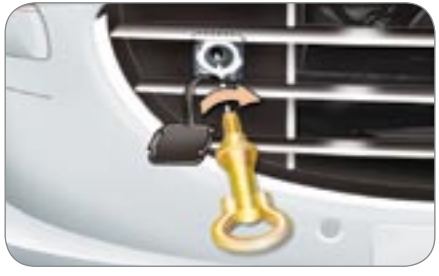

At the front and at the rear:

- ☞ Unclip the cover,
- ☞ Screw in the towing eye as far as it will go.

Special features of the automatic gearbox

When towing with the engine switched off, there is no braking or steering assistance.

Failure to observe this special requirement may lead to the destruction of certain braking units and the absence of braking assistance when the engine is re-started.

Place the gear lever in neutral (position N in the case of the automatic gearbox).

Towing a vehicle with an automatic gearbox in reverse gear is prohibited (absence of lubrication).

When towing with four wheels on the ground, the following rules must be obeyed:

- lever in position **N**,
- tow the vehicle at less than 30 mph (50 km/h) over a maximum distance of 30 miles (50 km).
- do not add oil to the gearbox.

Lifting (2 wheels only on the ground)

It is preferable to raise the vehicle with a professional lifting device.